

360° Adjustable Banner Display

210110, 210111, 210112, 210113, 210114
190080, 190081, 190082, 190083

Scan to view Product Instructional Video or visit:
www.creativedisplaysite.com/360display.html



Product Parts

- 1 - Base
- 2 - Base Receptacle
- 3 - Hubbed Telescoping Pole
- 4 - Hooked Arms (x4)



Display Set-Up

Step 1

Remove all parts from bag and place on a clean, flat surface. Insert the Hubbed Telescoping Pole (3) into the Base Receptacle (2). The pole is secured when the spring lock is engaged with the receptacles slot.




Step 2

Turn the knob on the Hubbed Telescoping Pole (3) counter clockwise to loosen the extending pole. Raise the pole to your desired display height and turn the knob clockwise to lock the extending pole into place.



Step 3


Insert the four Hooked Arms (4) into the 4 holes located on the hub to make an X configuration.

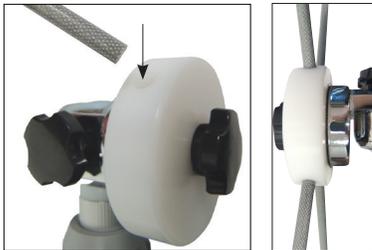

Depending on the size of the banner, you may need to cut the Shock Cord on two or all of the Hooked Arms (4) and remove the Extensions before you place them in the Hub. Keep the extensions as they can be added back on for a larger banner size later.

Step 4

Attach your grommeted banner by beginning at the top, insert the four arm hooks into the eyes of the four banner grommets. Poles will bend slightly to keep banner taut. Do not significantly over bend poles, this may cause the poles to break.

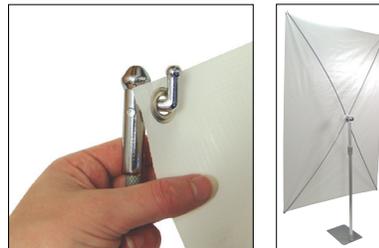

Step 5

To adjust the tilt of the display simply Loosen the Handled Screw on the side of the Hubbed Telescoping Pole (3) and adjust the Hub to the desired angle.



To change the Orientation - Loosen the Handled Screw on the Hub and rotate the Hub until the graphics provide the desired effect.



Storage & Care

Place all product parts into Carry Case and store in a cool dry location.

To clean, wipe with damp cloth.